

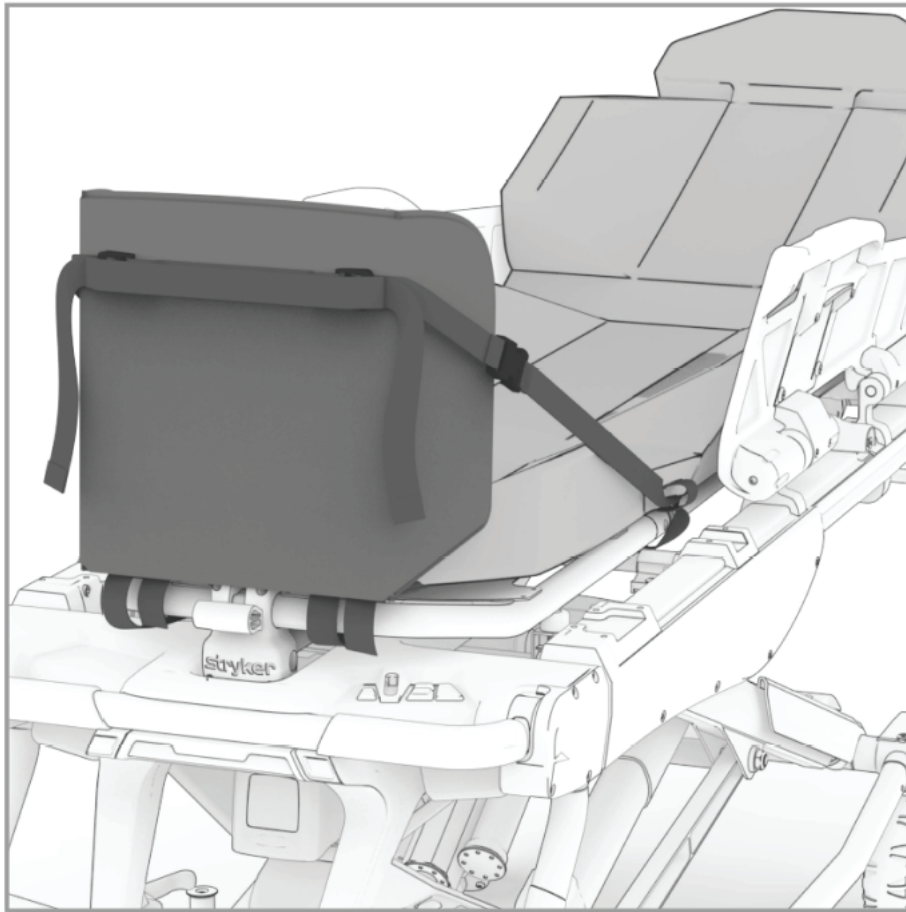


Figure 1 – Power-PRO 2, foot barrier

2025-09 | Refer to your Power-PRO 2 Operations/Maintenance Manual (6507-009-001)



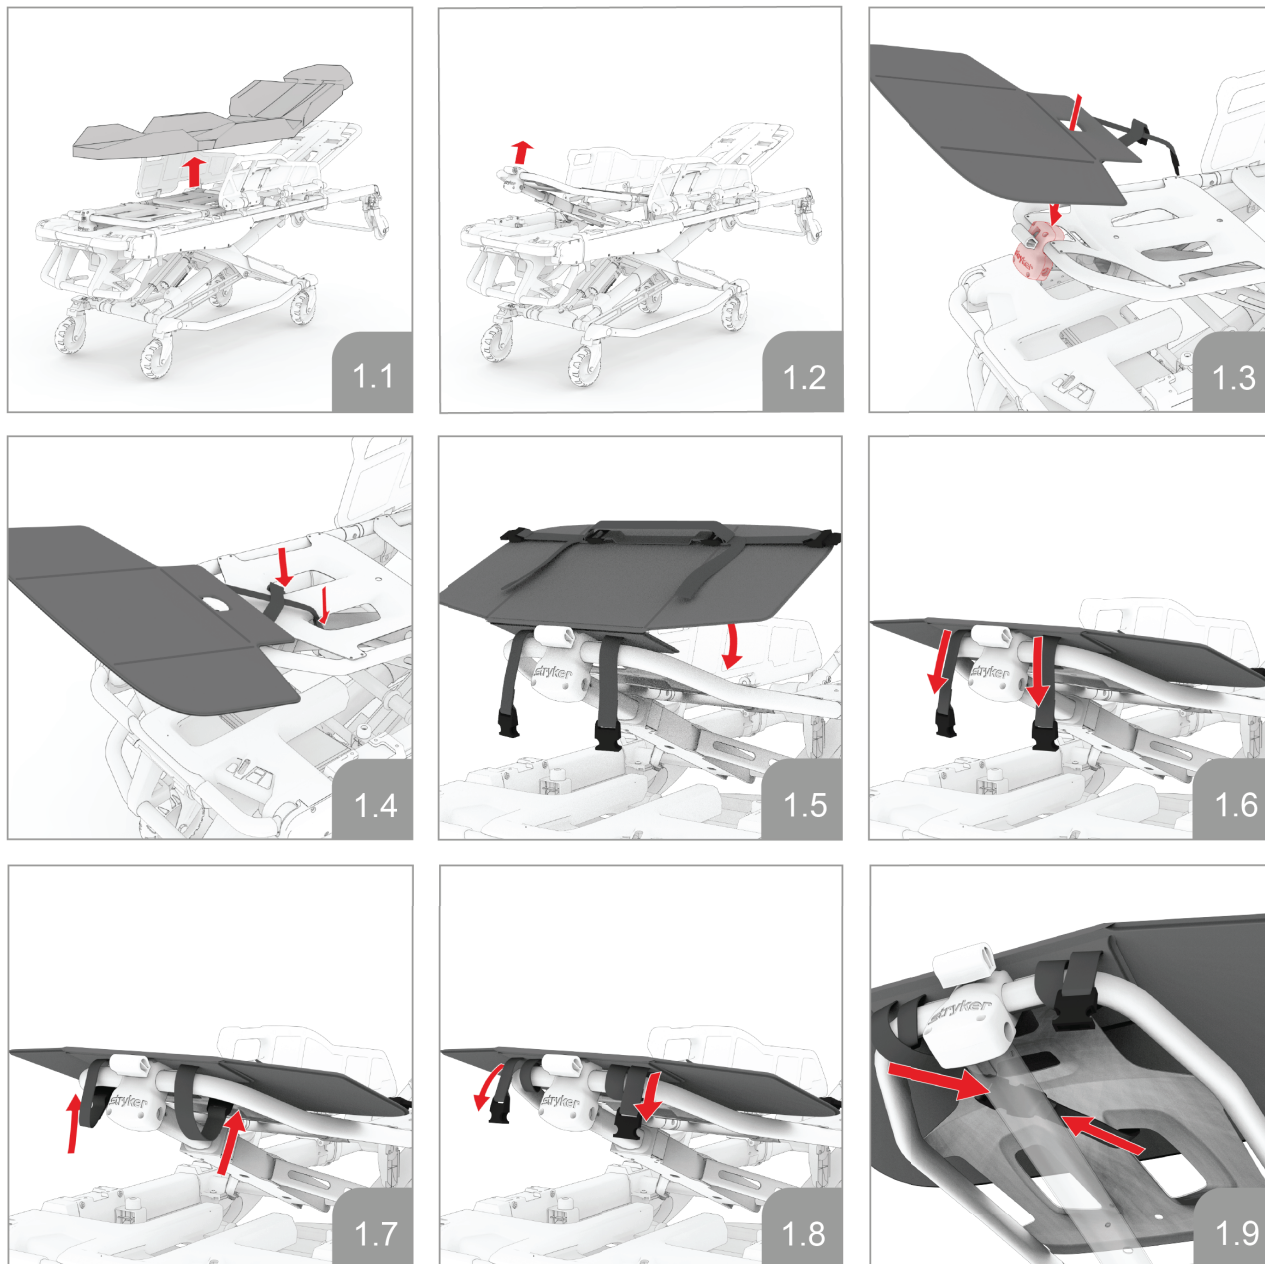


Figure 2 – Power-PRO 2, attaching the foot barrier

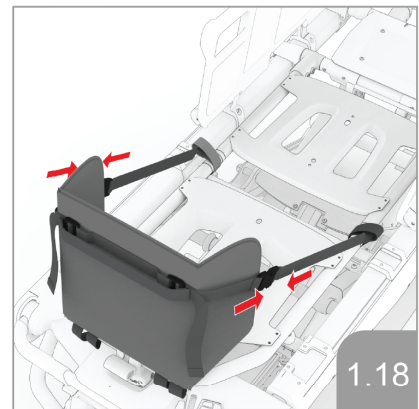
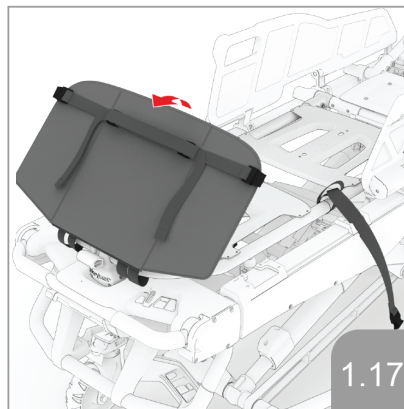
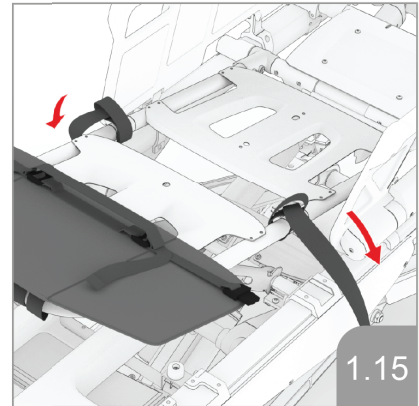
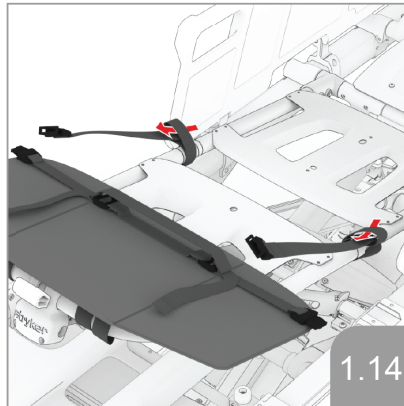
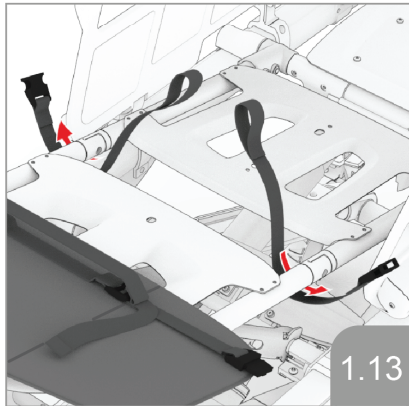
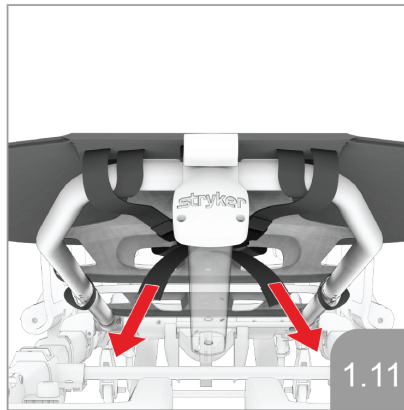
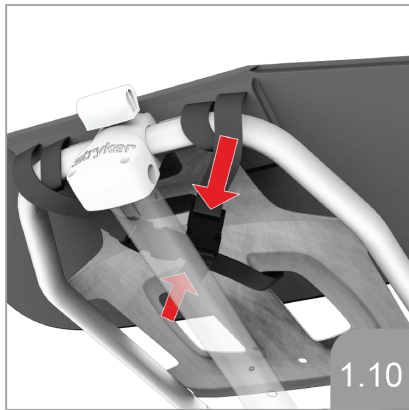


Figure 3 – Power-PRO 2, attaching the foot barrier

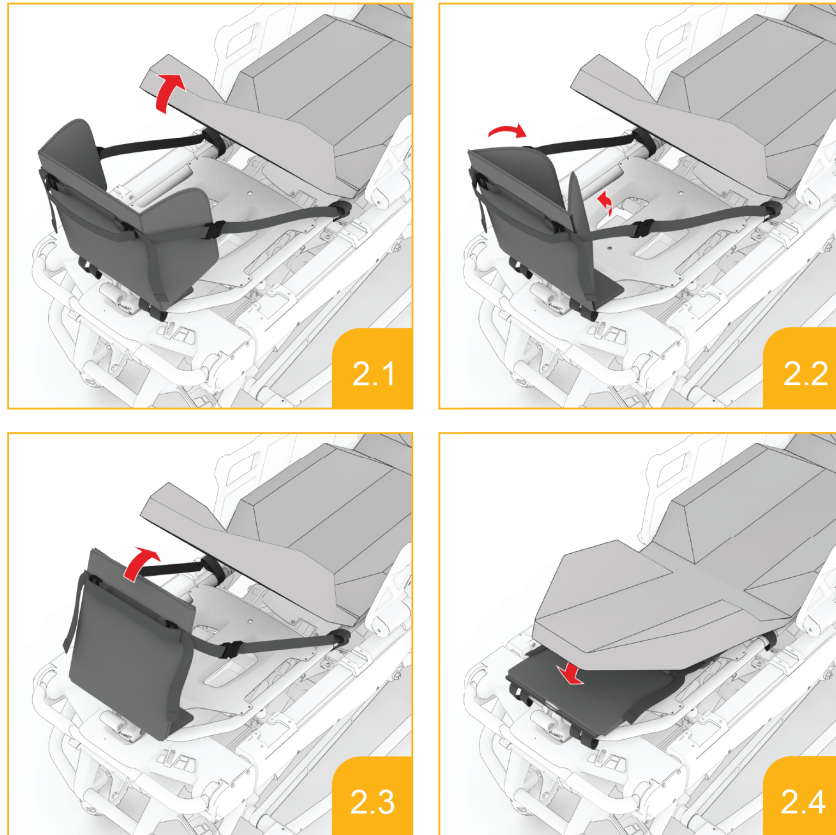


Figure 4 – Power-PRO 2, stowing the foot barrier

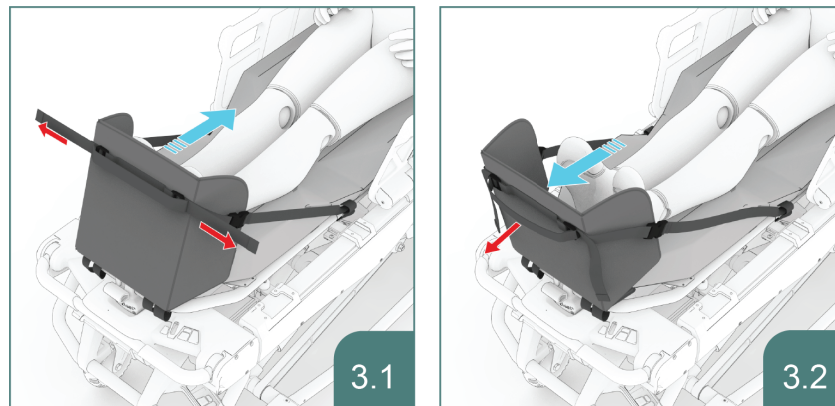


Figure 5 – Power-PRO 2, using the foot barrier

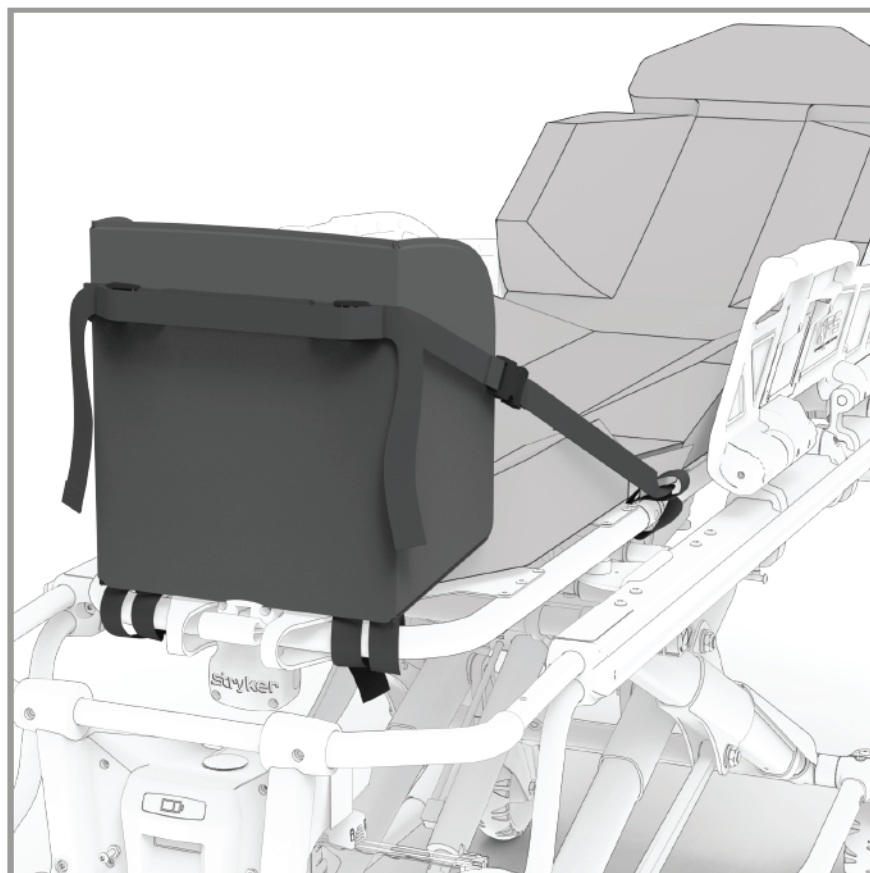


Figure 6 – Power-PRO XT and Performance-PRO XT, foot barrier (6506 shown)

2025-09 | Refer to your Power-PRO XT Operations Manual (6506-209-001) or Performance-PRO XT Operations Manual (6086-209-001)



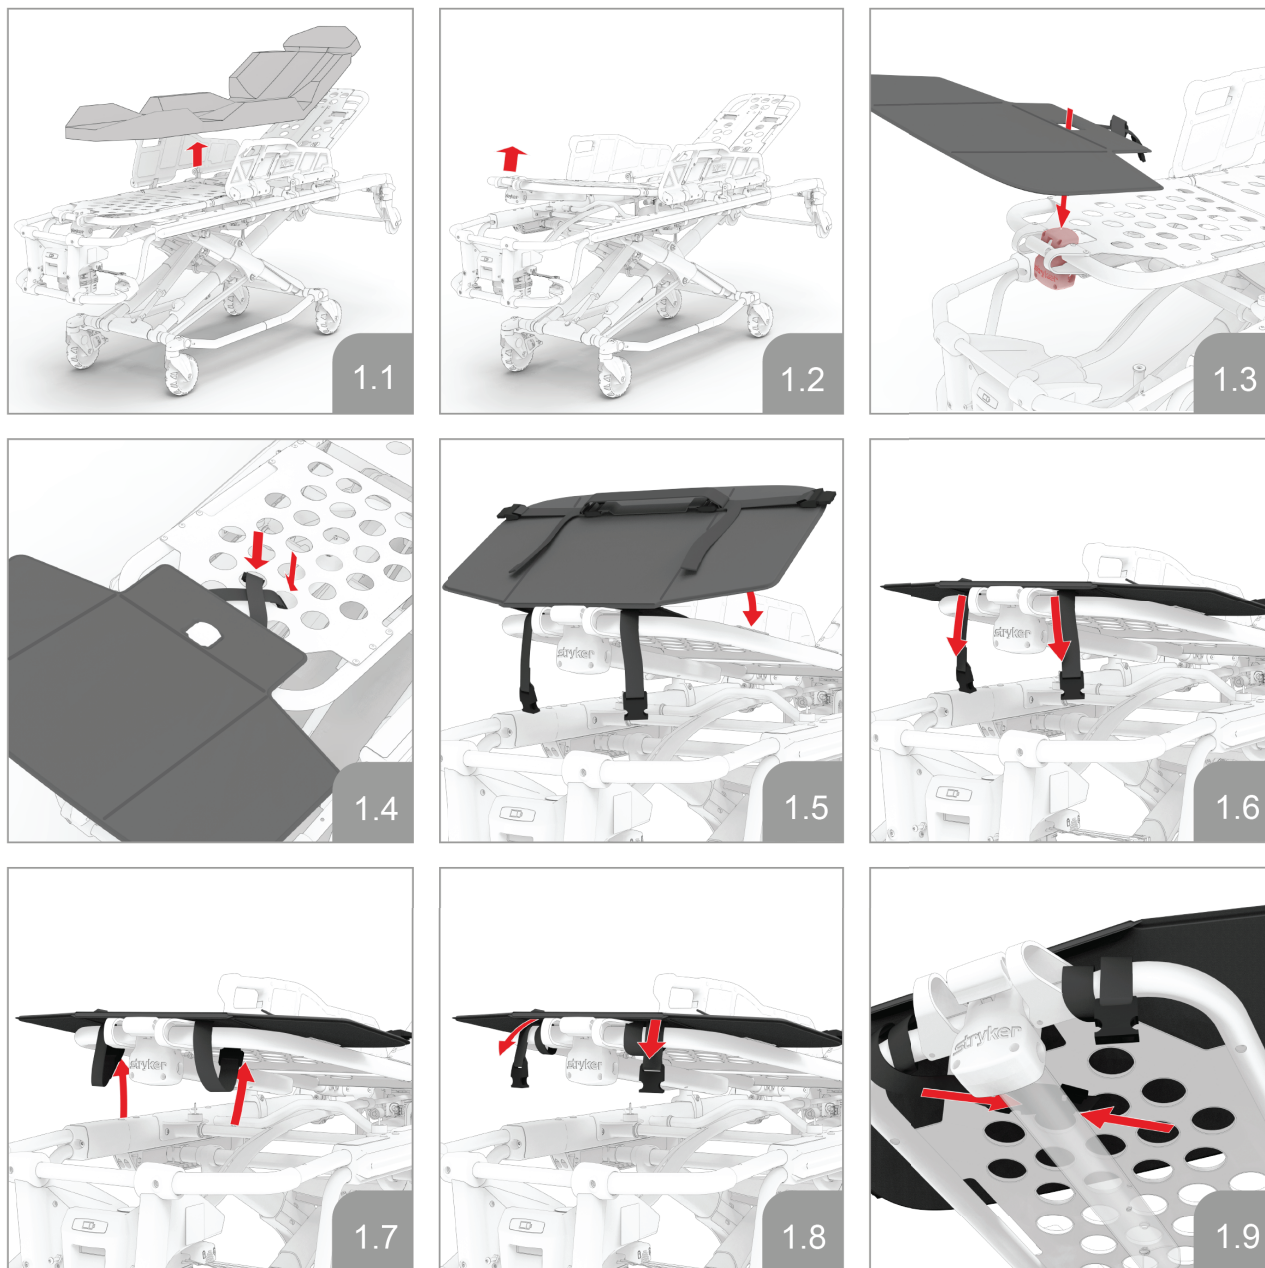


Figure 7 – Power-PRO XT and Performance-PRO XT, attaching the foot barrier (6506 shown)

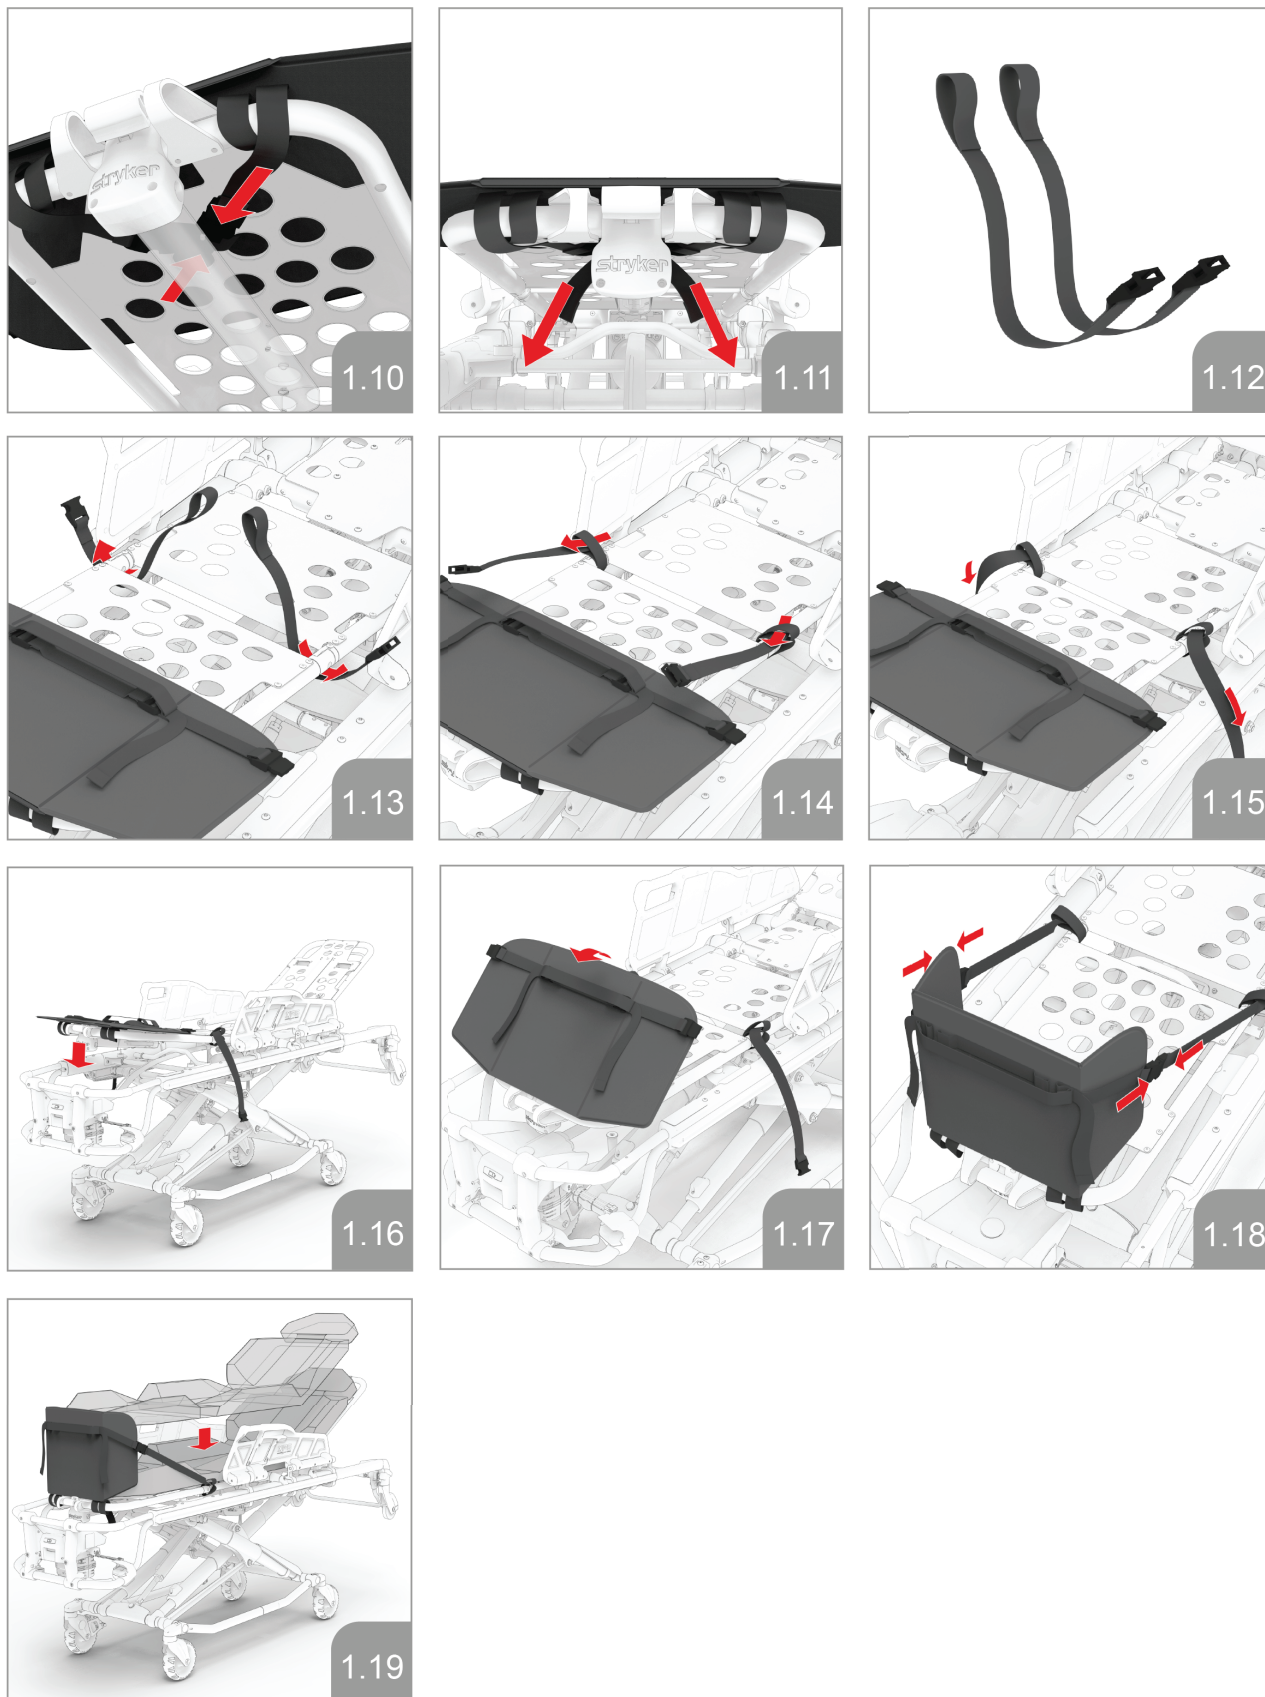


Figure 8 – Power-PRO XT and Performance-PRO XT, attaching the foot barrier (6506 shown)

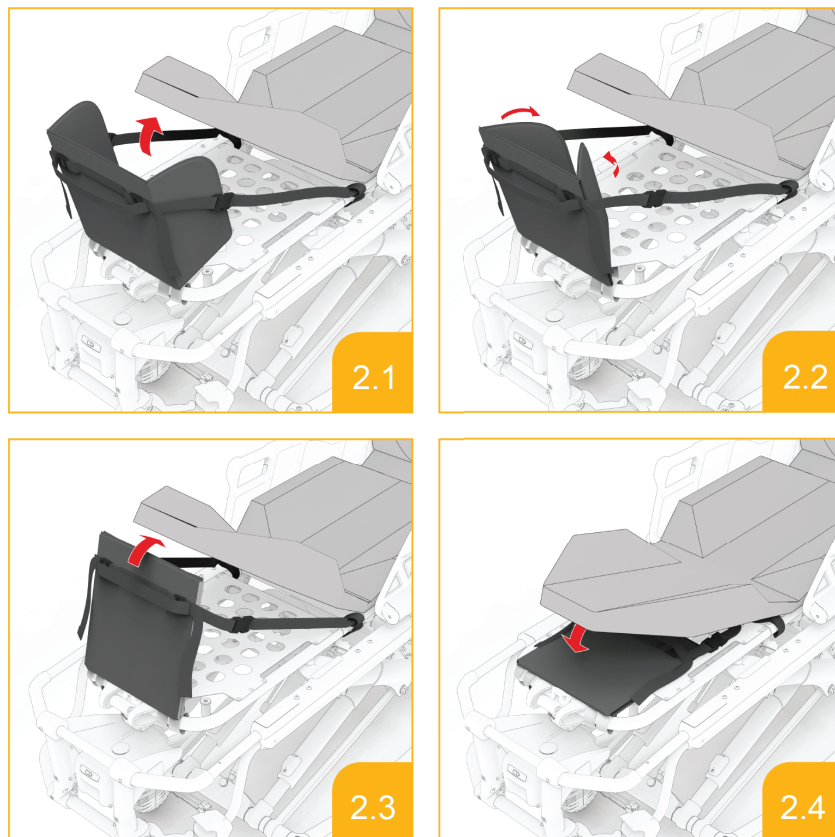


Figure 9 – Power-PRO XT and Performance-PRO XT, stowing the foot barrier

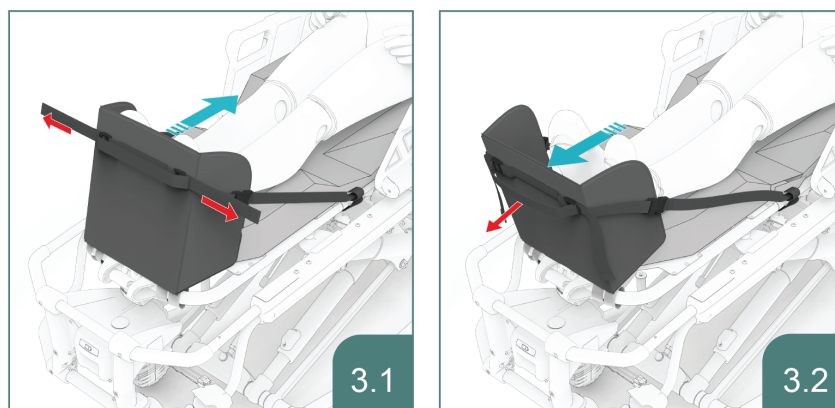


Figure 10 – Power-PRO XT and Performance-PRO XT, using the foot barrier