
4928 OVER BED TABLE ASSEMBLY AND OPERATING INSTRUCTIONS

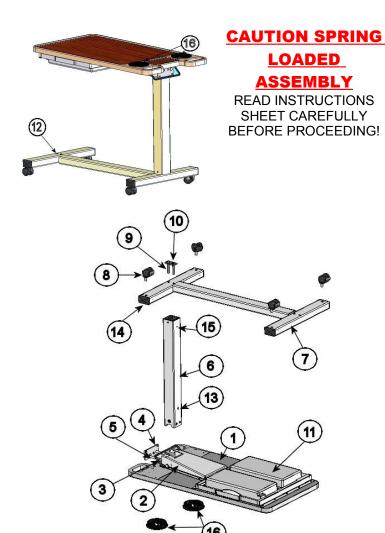

PARTS LIST

- 1 TOP 18 X 32
- 2 TOP BRACKET (400003-specify color)
- 3 TRIP HANDLE (482835-specify color)
- 4 BACK MOUNTING PLATE (400063- specify color)
- 5 3/8 –16 x 3 ¹/₄" BOLT (2) (BT06)
- 6 COLUMN ASSEMBLY (495091-90N)
- 7 U-BASE ASSEMBLY (Depends on color)

- TWIN HOODED CASTER (CA06)
- 9 BOLT PLATE (101023)
- 10 3/8-16 x 2 ¹/₄" BOLTS (2) (BT05)
- 11 OPTIONAL VANITY
- 12 HOLE PLUG (2) (PL05)
- 13 BLACK SHIPPING SCREW
- 14 4600 CASTER PLUG (460004)
- 6 Cup Holders (ch01pack of 2)

ASSEMBLY INSTRUCTIONS

- 1 Lay (#1) top on table or floor with (#2) Top Bracket as shown
- 2 Insert Mounting Bolts (#5) through Back Mounting Plate (#4) and turn just enough to begin threading into Top Bracket (#2).
- Insert the Column Assembly (#6) with the shipping screw (#13) facing inwards, as shown. The embossed dimples on the Back Mounting Plate (#4) and the Top Bracket (#2) must fit into the mating holes at the end of the outer column. Tighten the bolts with a 9/16" wrench.
- 4 Carefully install the four Casters (#8) into the Base Assembly (#7)
- 5 Insert two bolts (#10) through the Bolt Plate (#9), and then through the Base Assembly (#7) as shown. Align the bolts with the holes in the bottom of the inner column and tighten with 9/16" wrench.
- 6 Place the complete table upright on the casters.
- 7 Install two Hole Plugs (#12) into the base leg opposite the column.
- 8 Remove the Shipping Screw (#13) and discard.

OPERATING INSTRUCTIONS

- To raise or lower the top, squeeze the Trip Lever (#2) upward to release the lock and adjust the top to the desired position.
- 2 To lubricate the Column Assembly (#6), raise the top until the Column Assembly (#6) is fully extended. Located the lubrication port (#15) and apply a small amount of spray lubricant or lighter machine oil, repeat as needed.

PHILLIPS SCREWDRIVER 9/16" WRENCHES

4928 OVER BED TABLE ASSEMBLY AND OPERATING INSTRUCTIONS



3 Insert Cup holders (#16) into table top cavities